

astrum[®]



Wireless Barrel Speaker

SM300
User Manual

For correctly operating , please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by fault or oversight of this manual

FEATURES

Wireless and compact speaker

Ultra-portable with durable strap

Dirt-proof rubber finishing for better protection

Connects easily with any Bluetooth-enabled device

Sends bold and immersive sound in every direction

Also supports AUX line-in, MicroSD card and FM radio

Charges with most USB power sources for added convenience

SPECIFICATION

BT Version: 2.1

Input: DC 5V

Output Power: 10W

Speaker Size: 3"

Distortion: 0.5% @ 1W

Frequency: 120Hz~20KHz

Separation: $\geq 40\text{dB}$ (1KHz)

S/N: $\geq 70\text{dB}$


Transmission Distance: 10m

Battery: built-in 3000mAh rechargeable battery

Dimension: 250 x 125 x 115mm (L x W x H)

Weight: 950g (Approx)

INSTRUCTION FOR APPEARANCE AND KEY

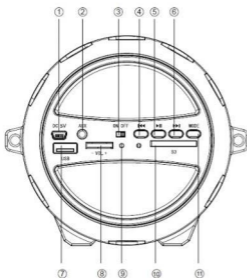

1. Charging jack
2. Aux-in jack
3. ON/OFF button
4. Forward
5. Play/Pause
6. Backward
7. USB port
8. Volume Gear
9. LED indicator
10. SD slot
11. Mode (Switch Bluetooth, USB disk, SD, FM and AUX-IN state)

BLUETOOTH

1. Turn the power button to "ON", The LED light turn blue and twinkle quickly and beep twice.
2. Activate Bluetooth of mobile phone and search for device name "Astrum SM300" then connect it. The blue LED light twinkle slowly and and beep third times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press LAST or NEXT button on the devices or on Mobile phones to select songs you like.
5. Press Play/pause button on the devices or on Mobile phones to play/stop the music
6. Use the "Volume Gear "to adjust volume up and down. Or adjust the mobile phones' volume.

PLAYING MUSIC FROM USB DISK & SD CARD

1. Turn the Power button to "ON".
2. Insert SD card or USB flash disk into slot, the music stored will be played automatically and blue LED light always keep lighting.
3. Under playing mode, short press Forward or Backward button to select songs you like, long press to fast forward or backward the song.
4. Press PLAY/PAUSE to play or pause.
5. Please turn the Power button to "OFF" while

without use.

Remark: Under Bluetooth playing mode, insert SD or USB will disconnect the Bluetooth and switch the playing from USB or SD card. You can press the MODE button to switch to Bluetooth mode again.

FM RADIO

1. Under FM radio state, the audio cable provided treat as antenal. Please Insert the audio cable to get the best FM signal before using.

2. Turn the power button to "ON", press the "MODE" button to switch to FM radio state.

3. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.

4. Press LAST or NEXT button to change the stored FM channel.

AUX-IN

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this devices. Then press the "MODE" button to switch to AUX-IN state. Enjoy...

When using an external device, all functions will be controlled by the external device except the "Play / pause" button.

REMARKS

1. Press the MODE button to switch the different modes, the order is Bluetooth, SD, USB disk, FM radio and AUX-IN.
2. Turn the power button to "off" to cut off the power supply while without use.

HOW TO CHARGE

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output (Not included), the red charging indicator keep lighting.
2. Charge time should be 3-5 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

Astrum is a Trademark of Astrum Holdings Limited and all rights reserved.

All other brands name & trademarks are property of their respective owners.

All Specification & Photos are for reference purpose only.

www.astrumltd.com